HOME
DECORATORS
COLLECTION

SK17167A SHUTTER TV STAND 26"Hx59"Wx19"D

INV#10622

ASSEMBLY INSTRUCTIONS

Made In China

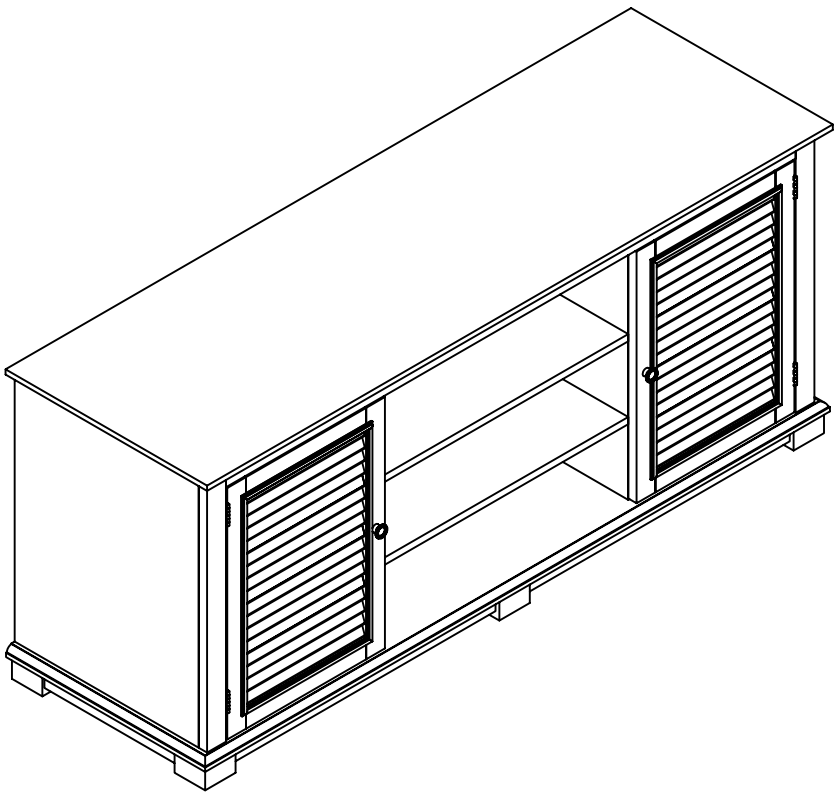

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.

PARTS LIST

A 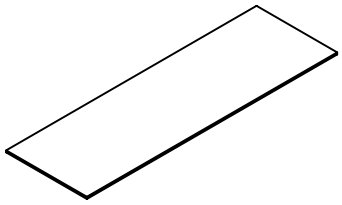 TOP PANEL-1PC	B 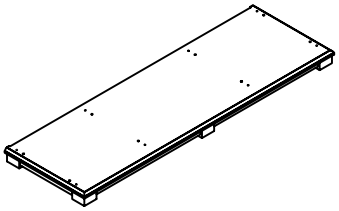 BOTTOM PANEL-1PC	C 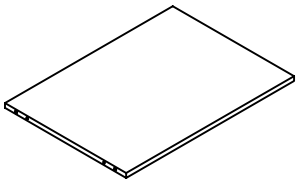 FIXED SHELF-2PCS
D 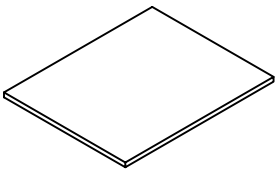 ADJUSTABLE SHELF-4PCS	E 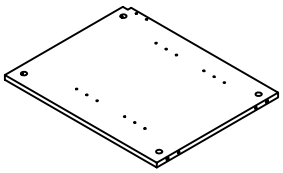 LEFT DIVIDER-1PC	F 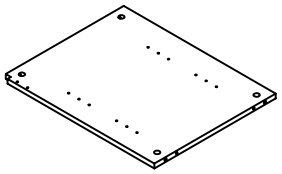 RIGHT DIVIDER-1PC
G 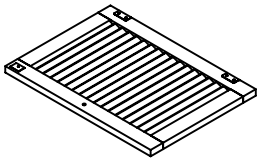 LEFT DOOR-1PC	H 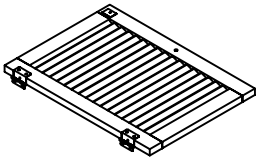 RIGHT DOOR-1PC	I 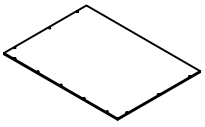 LEFT BACK PANEL-1PC
J 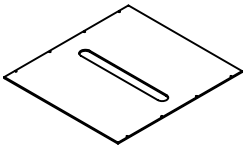 CENTER BACK PANEL-1PC	K 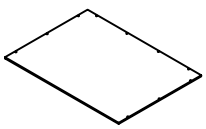 RIGHT BACK PANEL-1PC	L 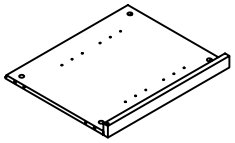 LEFT SIDE PANEL-1PC

M 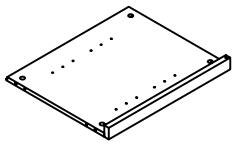 RIGHT SIDE PANEL-1PC	N 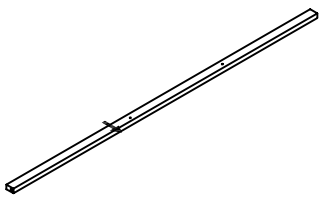 FRONT CROSS BAR-1PC	a WOOD DOWEL-26PCS
b  CAM LOCK BOLT-24PCS	c CAM LOCK-24PCS	d 5/8"L ROUND HEAD SCREW-38PCS
e 1"L FLAT HEAD SCREW-2PCS	f SHELF PIN-16PCS	g 1/2"L FLAT HEAD SCREW-8PCS
h PLASTIC COVER-16PCS	i KNOB-2PCS	j KNOB BOLT-2PCS
k  MAGNET-2PCS		
l METAL PLATE-6PCS	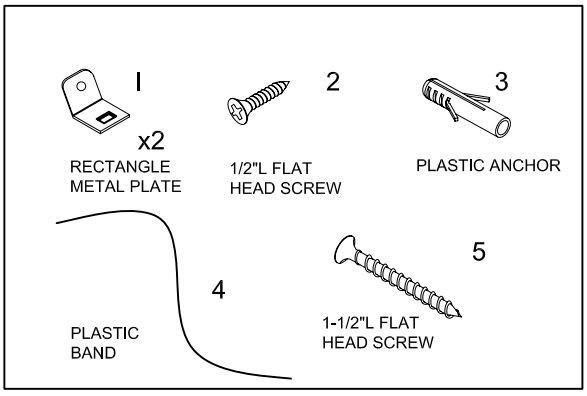 ANTI-TIPPING HARDWARE PACKAGE	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

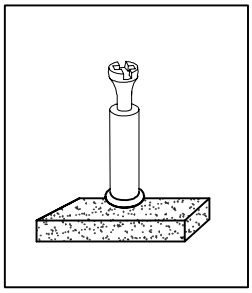

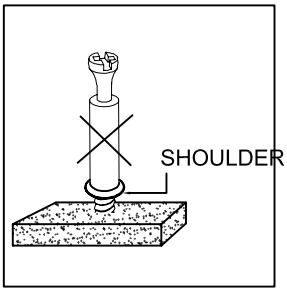

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

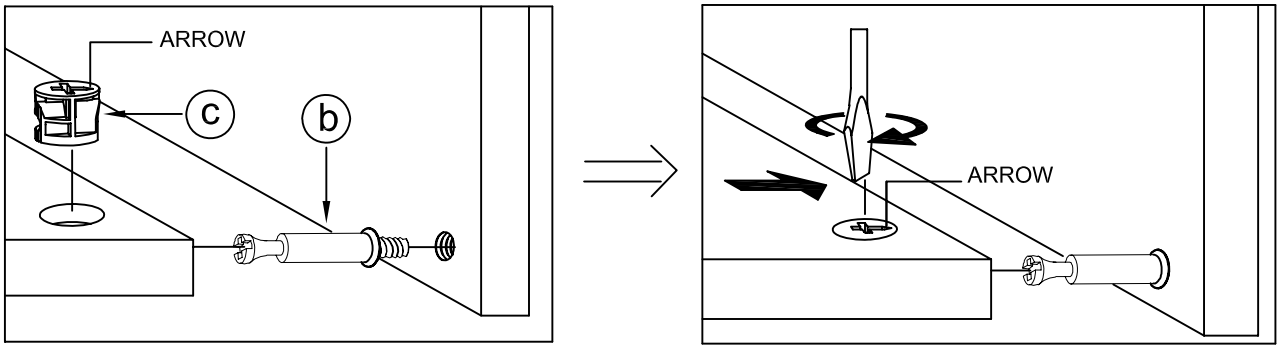

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

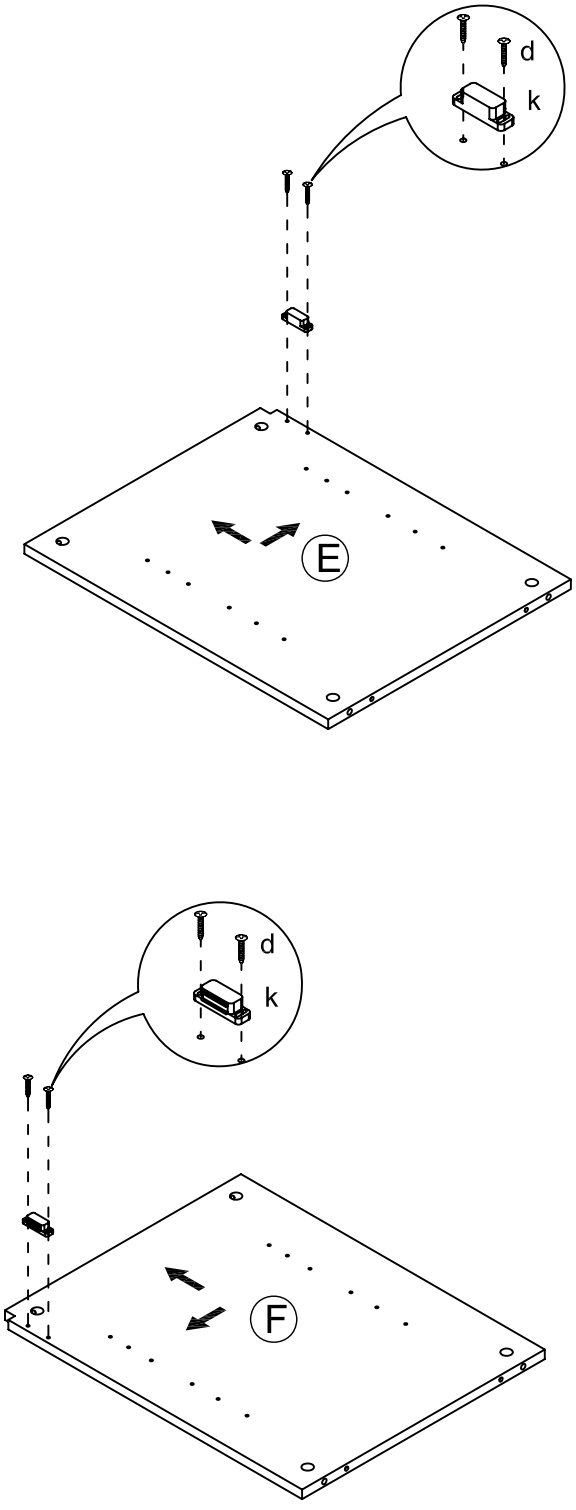

- TIGHTEN THE MAGNET (k) ONTO THE LEFT DIVIDER (E) AND THE RIGHT DIVIDER (F) BY USING THE 5/8" L ROUND HEAD SCREW (d).

FIG 2

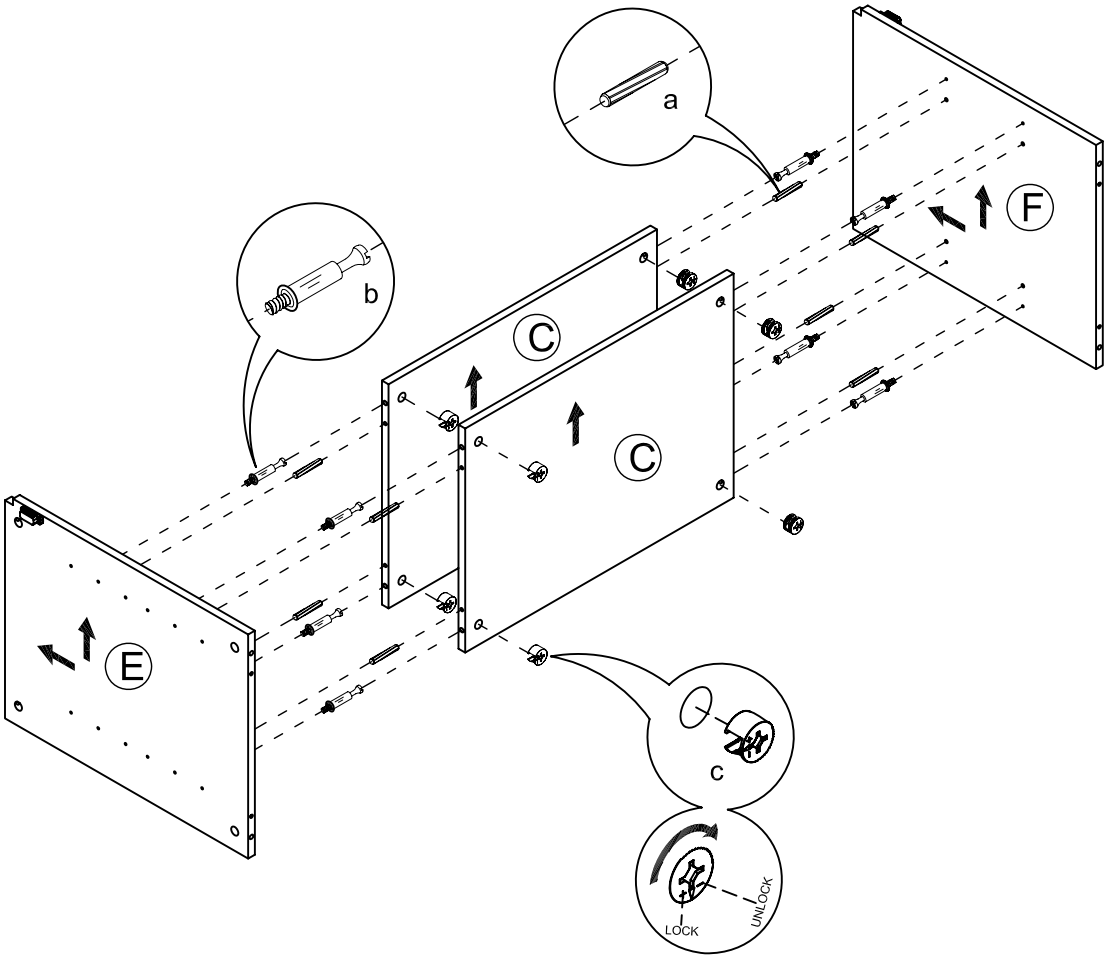

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) TO THE LEFT DIVIDER (E) AND THE RIGHT DIVIDER (F).
- JOIN THE LEFT DIVIDER (E) AND THE RIGHT DIVIDER (F) TO THE FIXED SHELF (C) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.

FIG 3

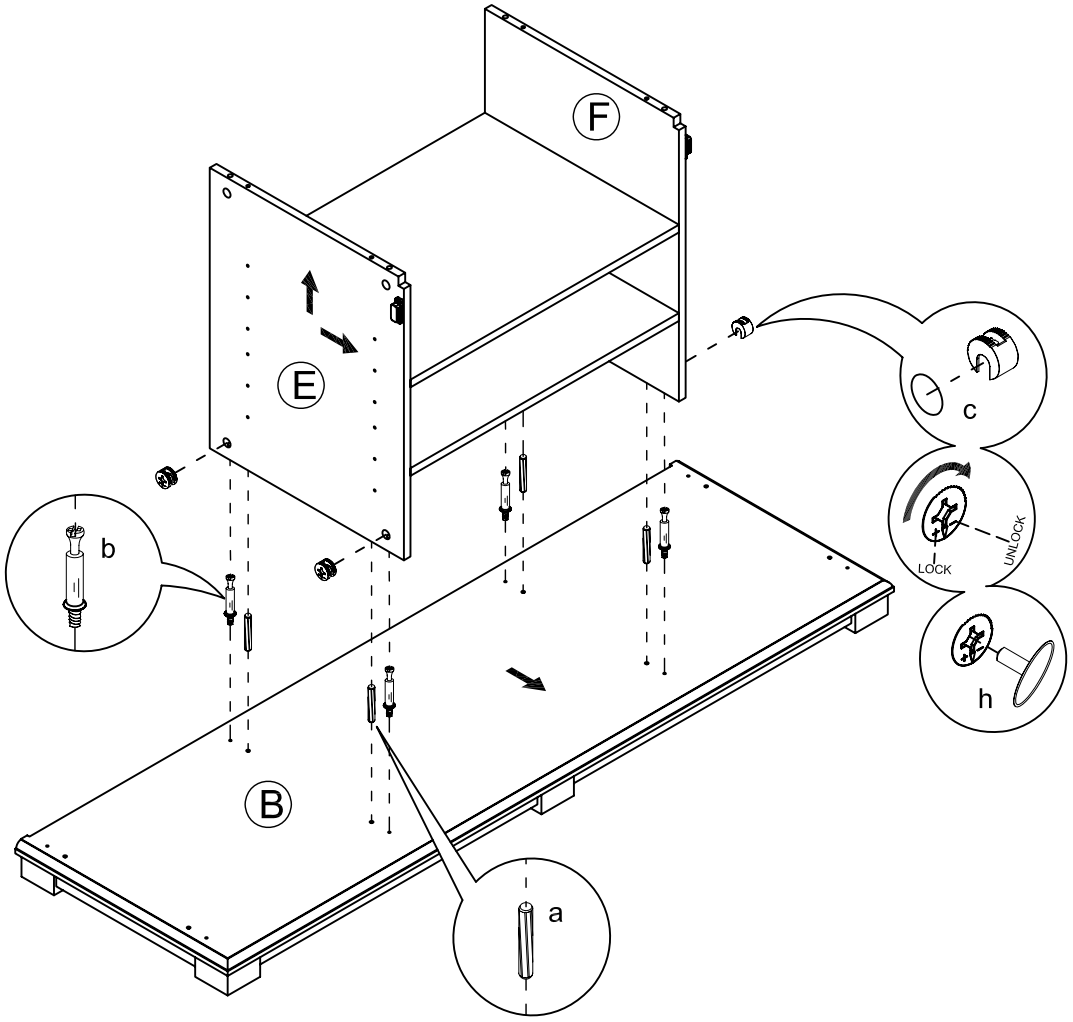

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) TO THE BOTTOM PANEL (B).
- JOIN THE ASSEMBLED PART TO THE BOTTOM PANEL (B) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES BY USING THE PLASTIC COVER (h).

FIG 4

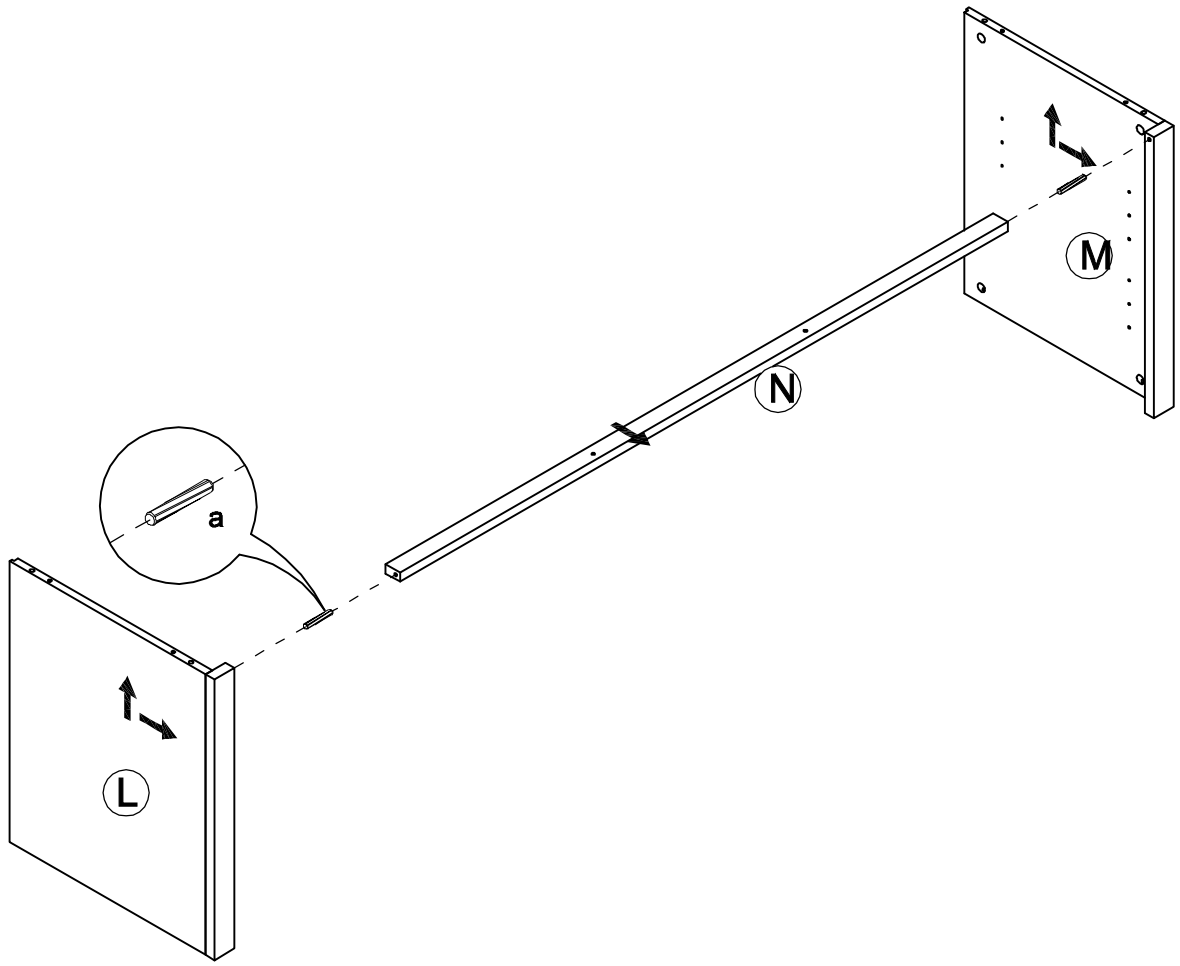

- INSTALL THE WOOD DOWEL (a) TO THE FRONT CROSS BAR (N).
- JOIN THE LEFT SIDE PANEL (L) AND THE RIGHT SIDE PANEL (M) BY USING THE WOOD DOWEL (a).

FIG 5

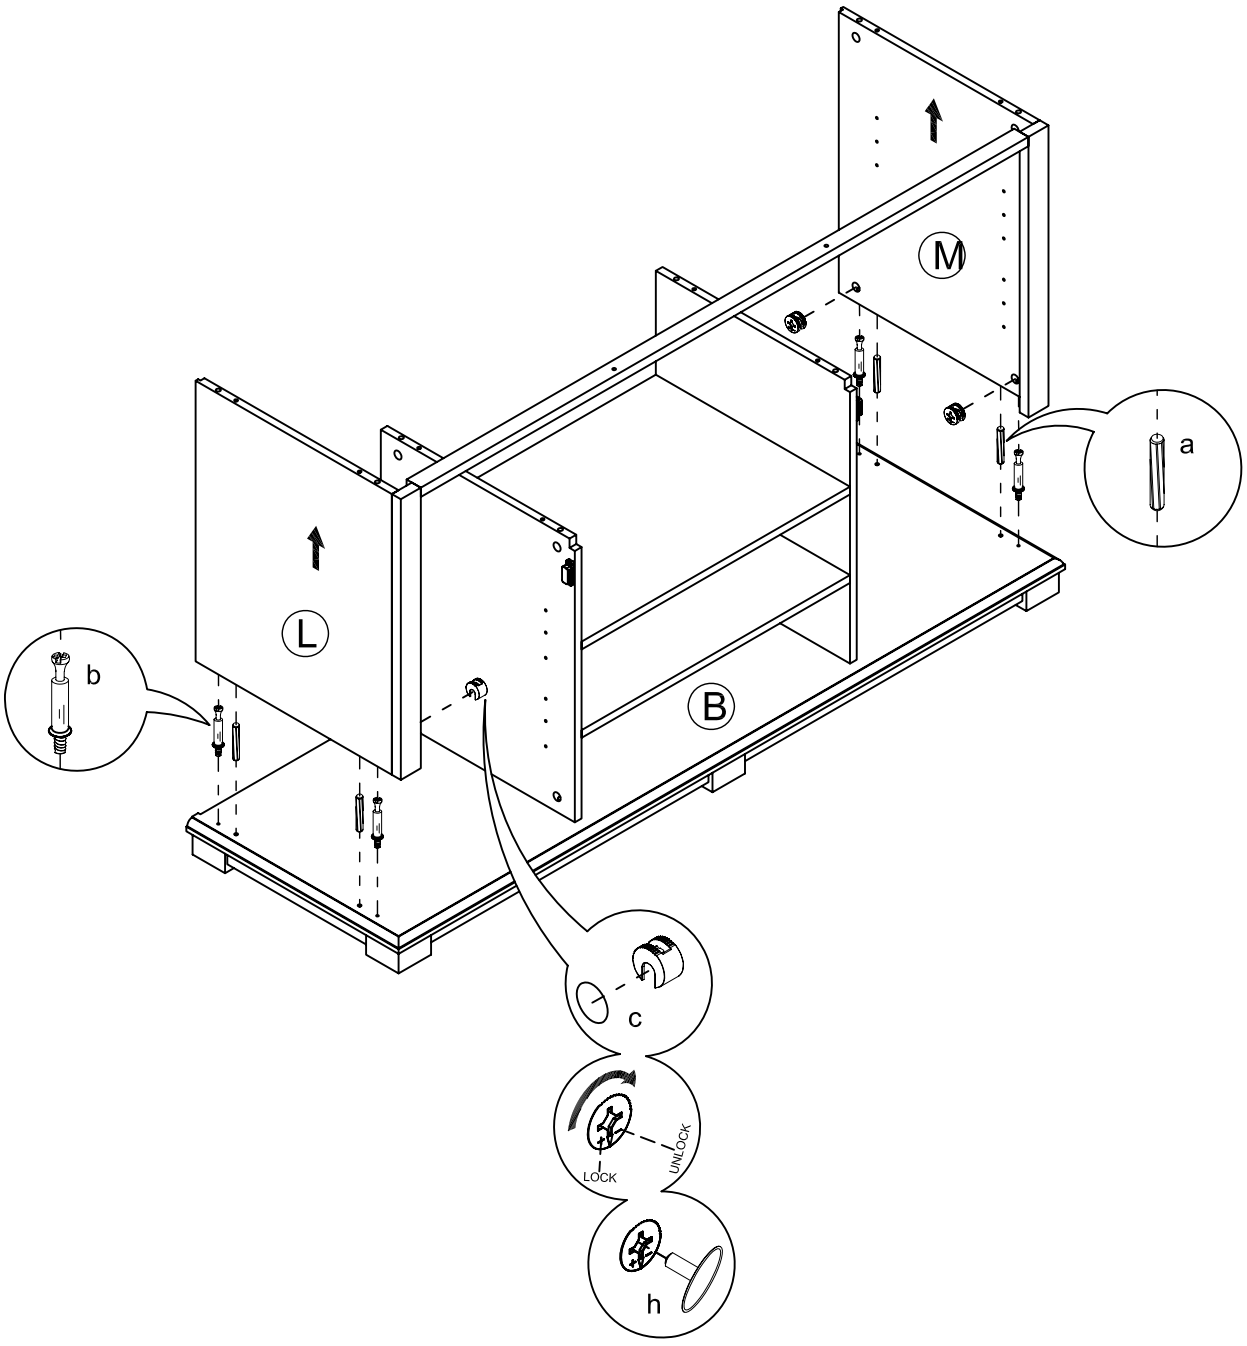

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) TO THE BOTTOM PANEL (B).
- JOIN THE ASSEMBLED PART TO THE BOTTOM PANEL (B) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE PLASTIC COVER (h).

FIG 6

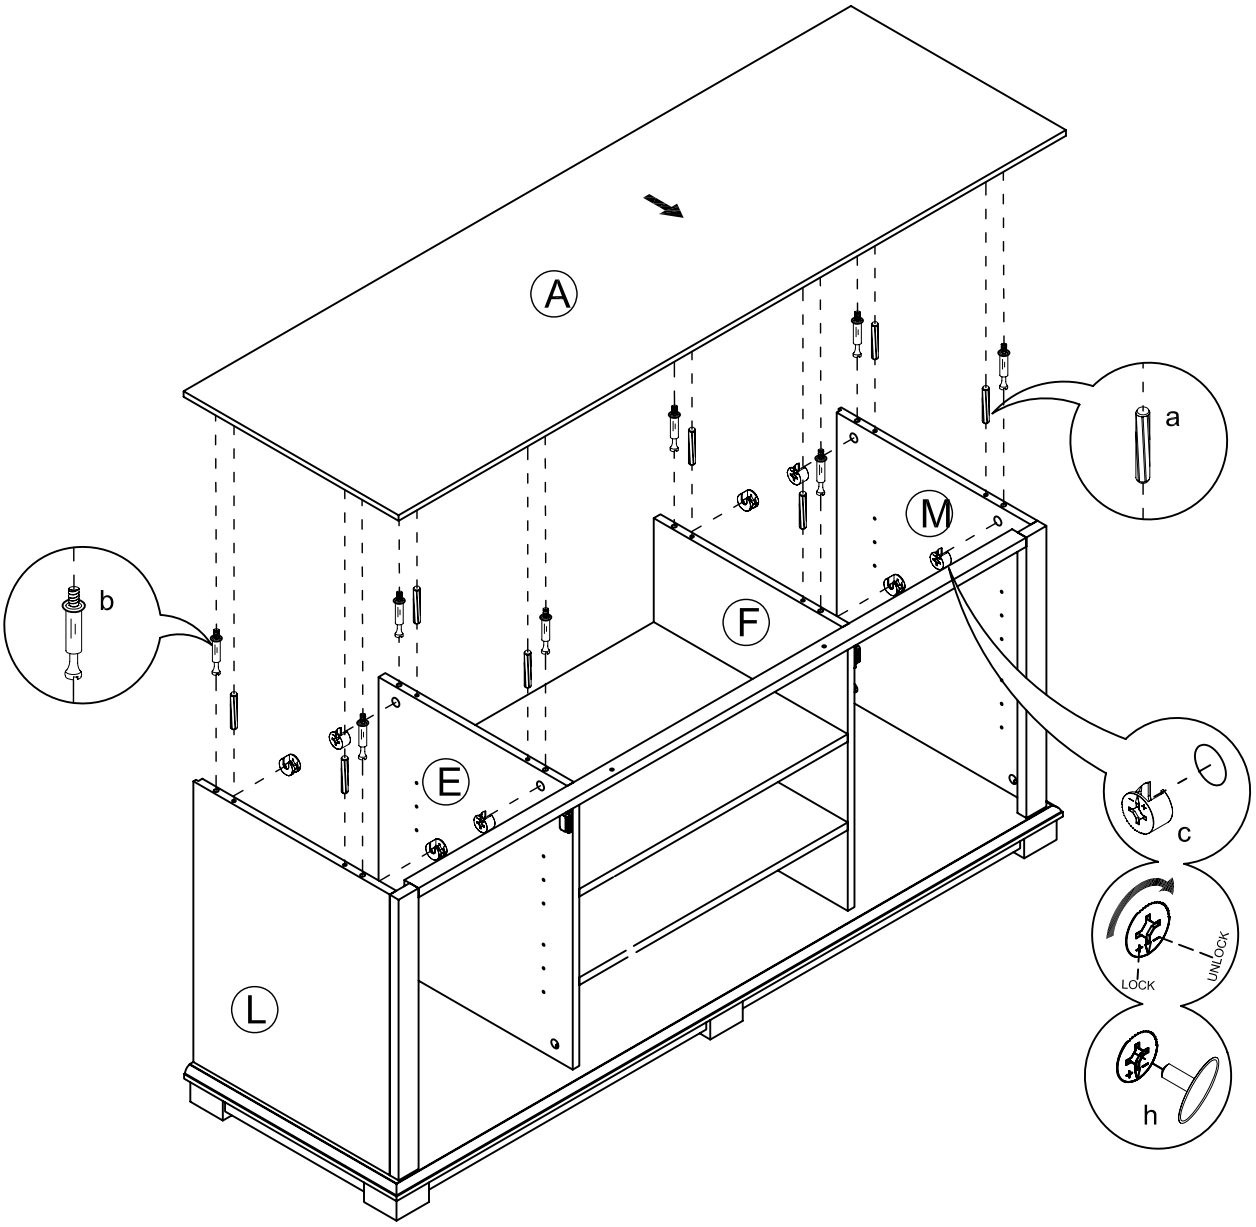

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) TO THE TOP PANEL (A).
- JOIN THE ASSEMBLED PART TO THE TOP PANEL (A) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE PLASTIC COVER (h).

FIG 7

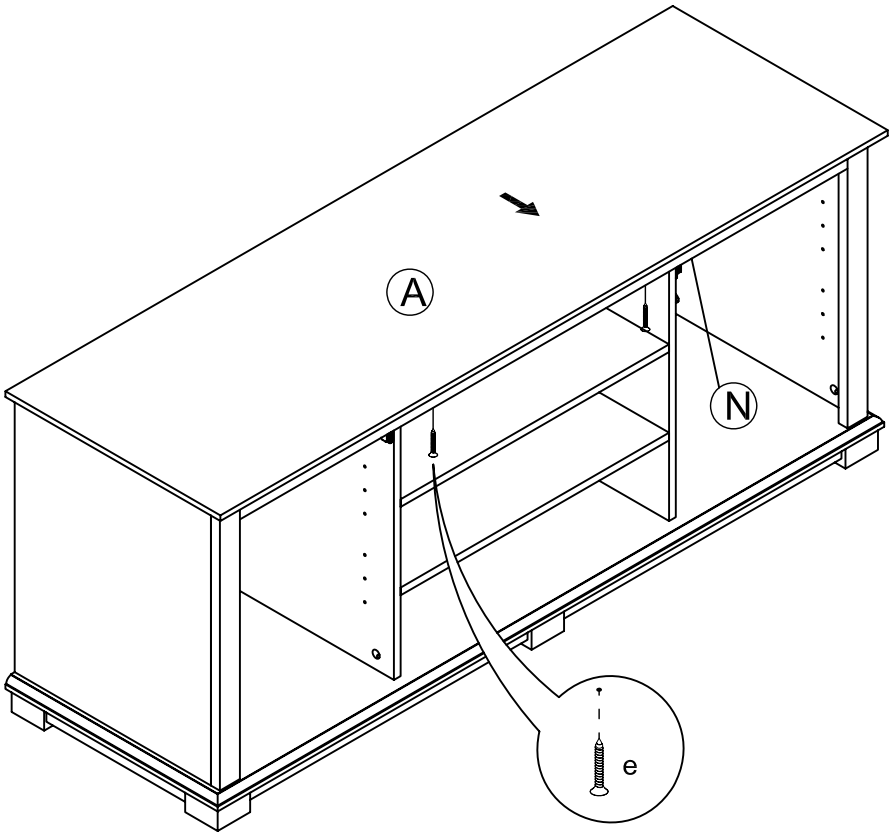

- TIGHTEN THE FRONT CROSS BAR (N) TO THE TOP PANEL (A) BY USING THE 1”L FLAT HEAD SCREW (e).

FIG 8

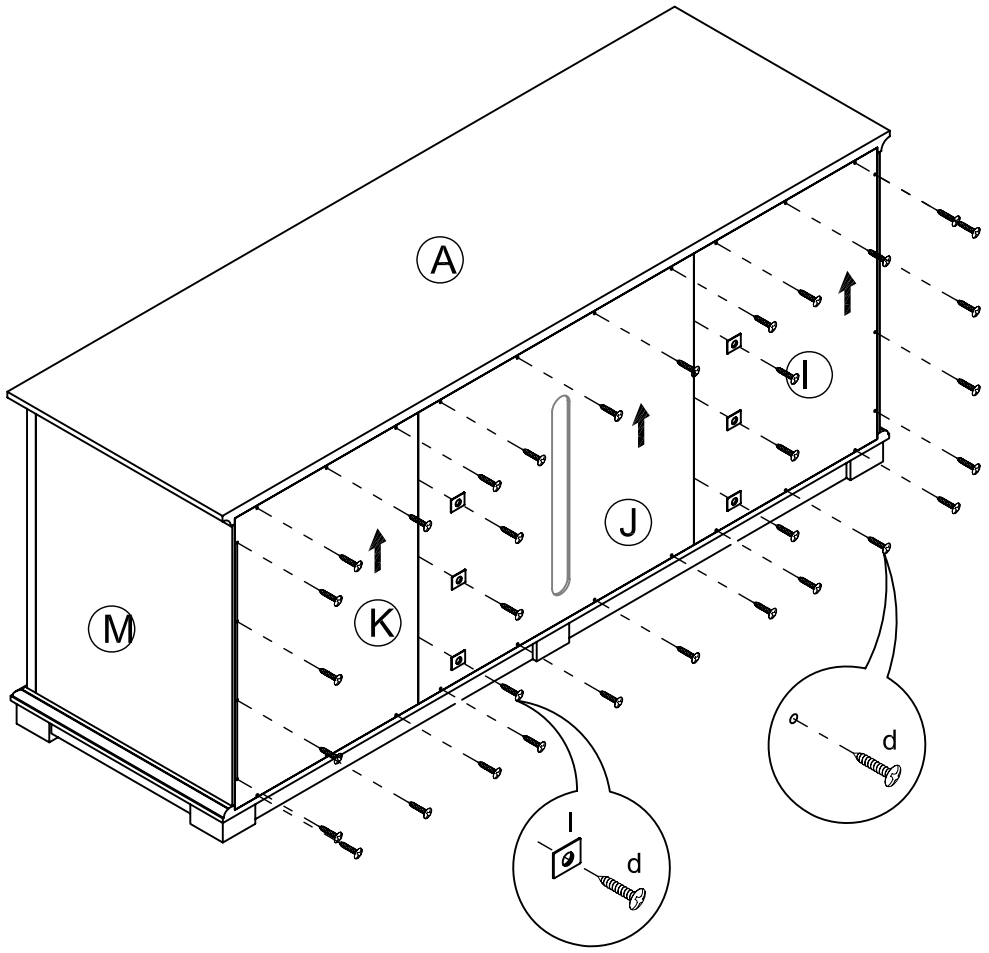

- TIGHTEN THE LEFT BACK PANEL (I), THE CENTER BACK PANEL (J), AND THE RIGHT BACK PANEL (K) TO THE ASSEMBLED PART BY USING THE METAL PLATE (I) AND THE 5/8” L ROUND HEAD SCREW (d).

FIG 9

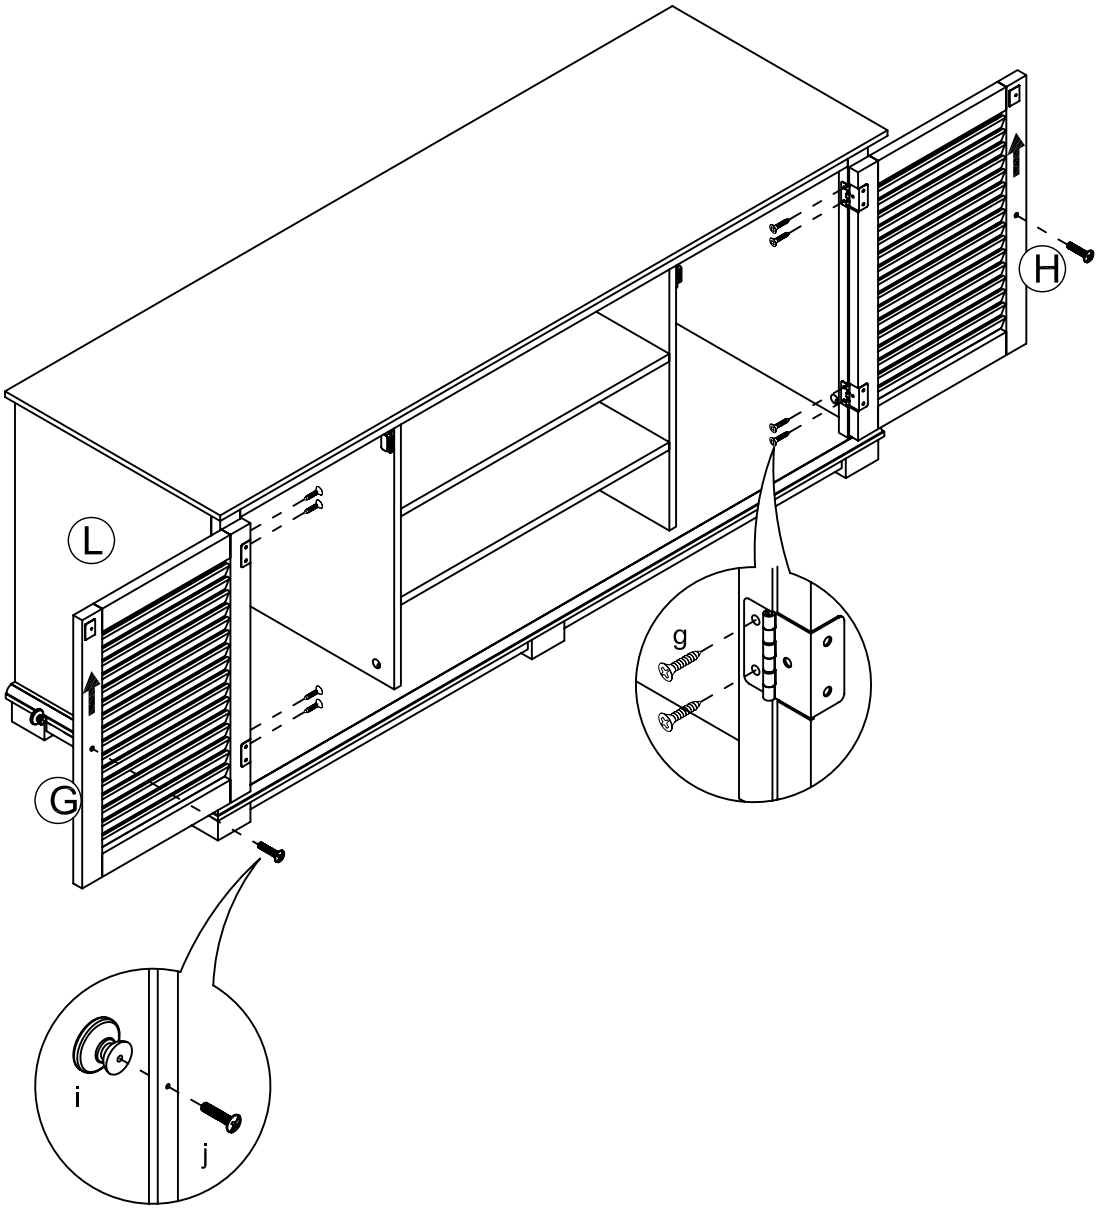

- ATTACH THE LEFT DOOR (G) AND THE RIGHT DOOR (H) TO THE ASSEMBLED PART BY USING THE 1/2” L FLAT HEAD SCREW (g).
- TIGHTEN THE KNOB (i) ONTO THE LEFT SIDE DOOR (G) AND THE RIGHT SIDE DOOR (H) BY USING THE KNOB BOLT (j).

FIG 10

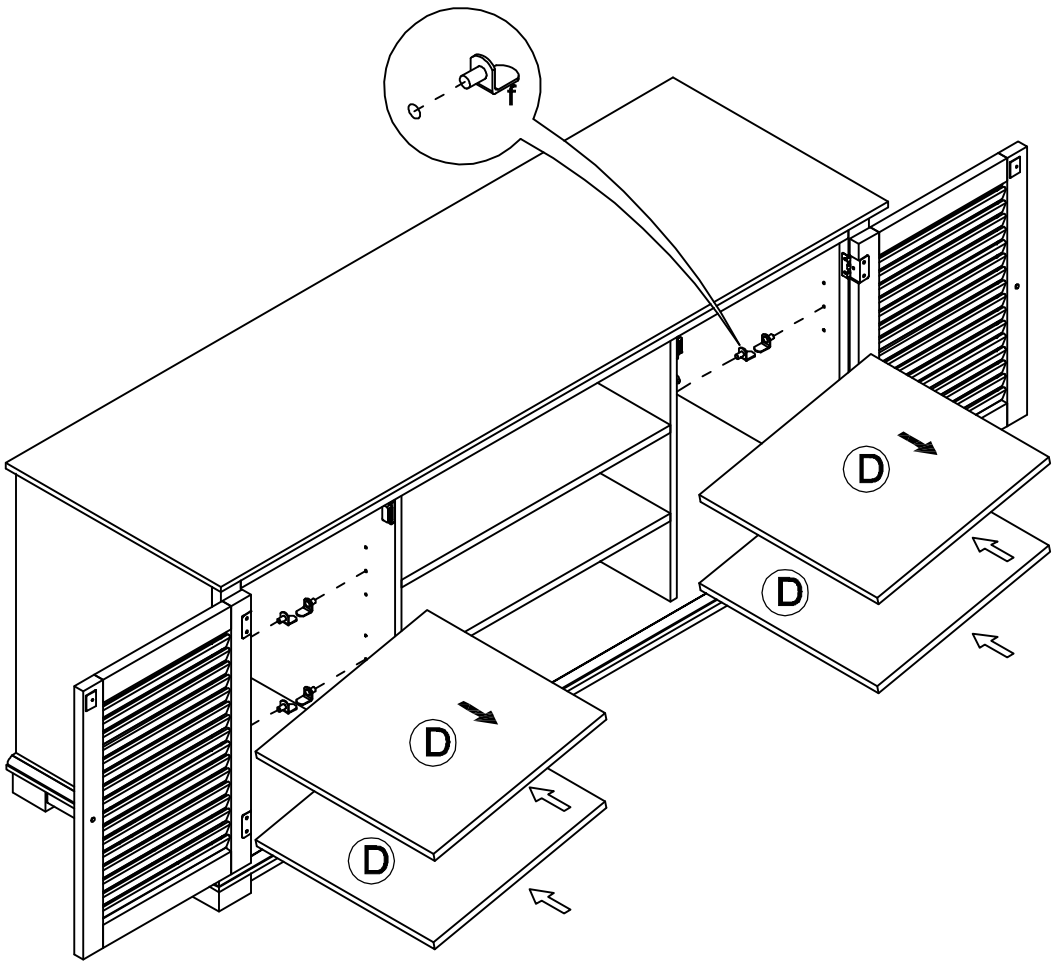

- PLACE THE SHELF PIN (f) INTO THE DESIRED POSITION AND PLACE THE ADJUSTABLE SHELF (D) ABOVE THE SHELF PIN (f).

FIG 11

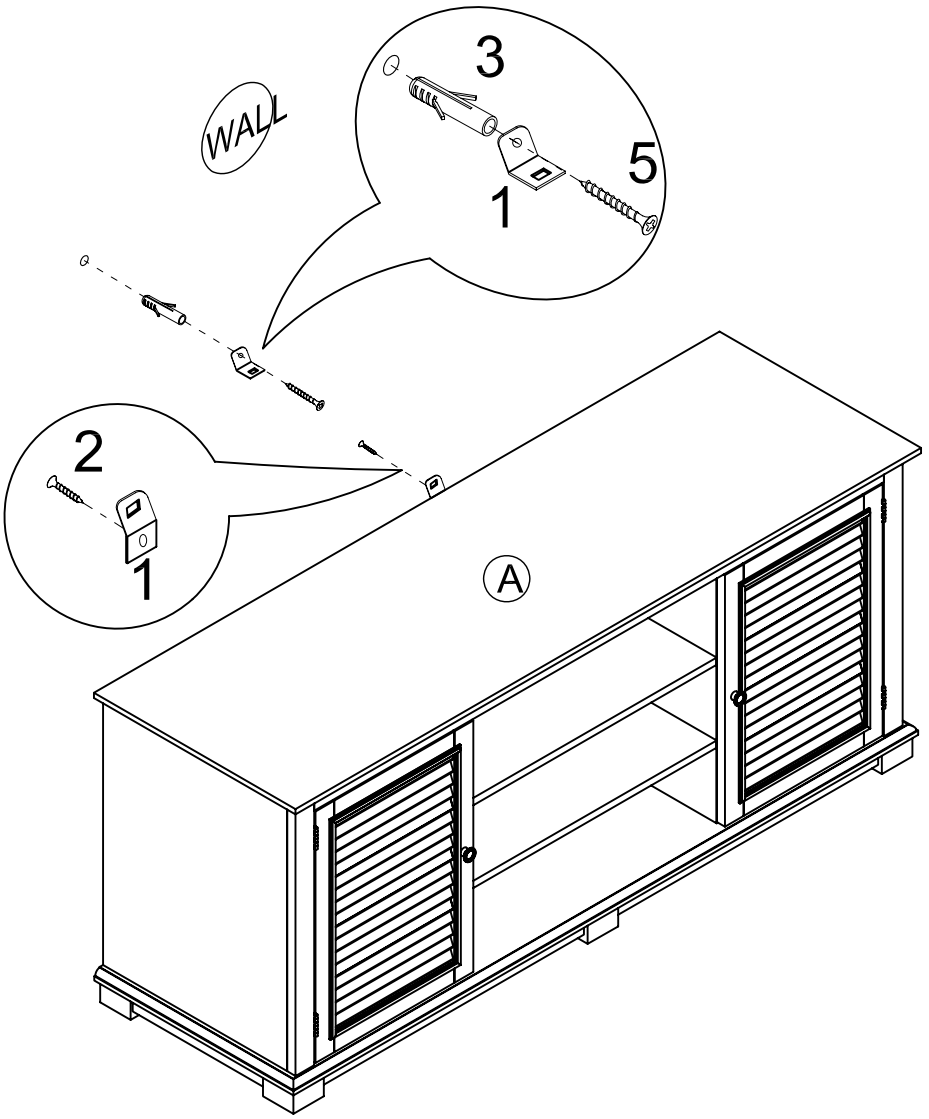

- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE REAR END OF THE TOP PANEL (A) BY USING THE 1/2” L FLAT HEAD SCREW (2).
- PLACE THE ASSEMBLED UNIT AT THE DISIRED POSITION. MARK THE INSERTION POINTS FOR THE PLASTIC ANCHOR (3).
- USING THE PROPER HARDWARE FOR YOUR WALL TYPE DRILL 1/4” HOLE. INSERT THE PLASTIC ANCHOR (3) INTO THE WALL.
- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE PLASTIC ANCHOR (3) BY USING 1-1/2” L FLAT HEAD SCREW (5).

FIG 12

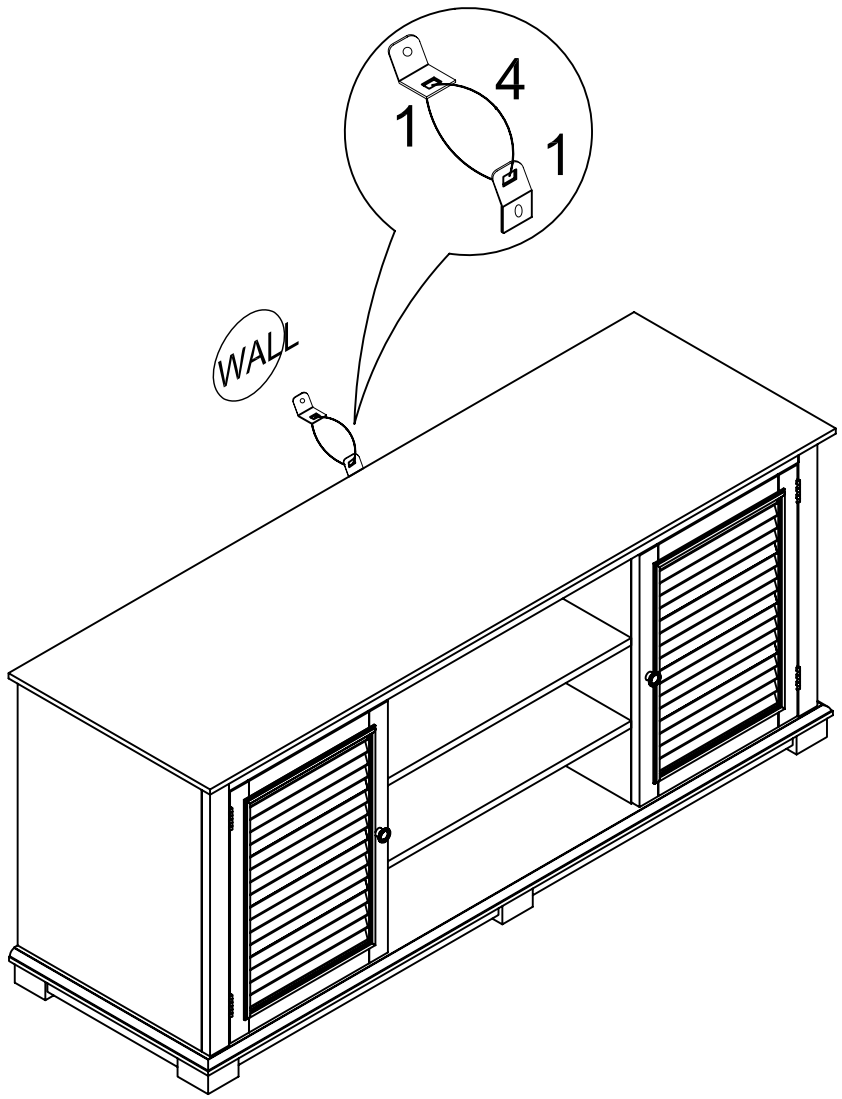

● USING THE PLASTIC BAND (4) CONNECT TWO RECTANGLE METAL PLATES (1).